

# **HARKEN®**

## **INSTALLATION SHEET**

### **IMPORTANT ADDITION TO Norseman and Sta-Lok Instructions**

1251 East Wisconsin Avenue • Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 691-3008


Web: [www.harken.com](http://www.harken.com) • Email: [harken@harken.com](mailto:harken@harken.com)

### **Important—You Must Install the Stainless Steel Washer!**

Norseman and Sta-Lok studs are packaged with a stainless steel washer. ***This washer must be placed on the wire before the Norseman or Sta-Lok nosepiece is put on the wire and the stud assembled.***

The washer will ride loosely on the wire above the top of the Norseman/ Sta-Lok stud and will prevent the foils from slipping down over the top of the fitting in the event the torque tube clamp becomes loose.

***You must use the washer.*** If the washer is not used and the foils slip down, they may unthread the Norseman/Sta-Lok terminal thus parting the headstay.

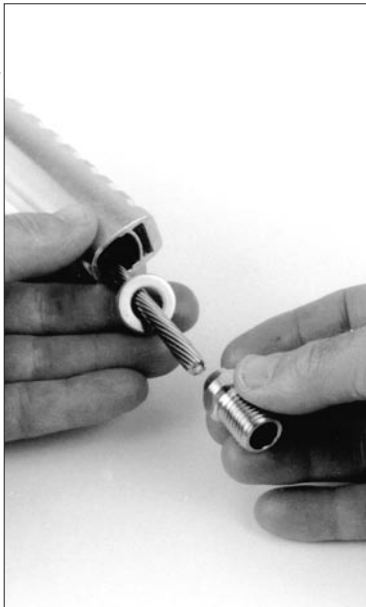

### **Maintenance**

Harken equipment is designed for minimal maintenance, but some maintenance is required to give the best service and to comply with the Harken limited warranty.

In general, the most important aspect of maintenance is to keep your equipment clean by frequently flushing with freshwater.

In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

### **Warranty**

See the Harken catalog for full maintenance and warranty information.