


Big Boat Traveler Car Coupler

580, 752

1251 East Wisconsin Avenue • Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 691-3008

Web: www.harken.com • E-mail: harken@harken.com

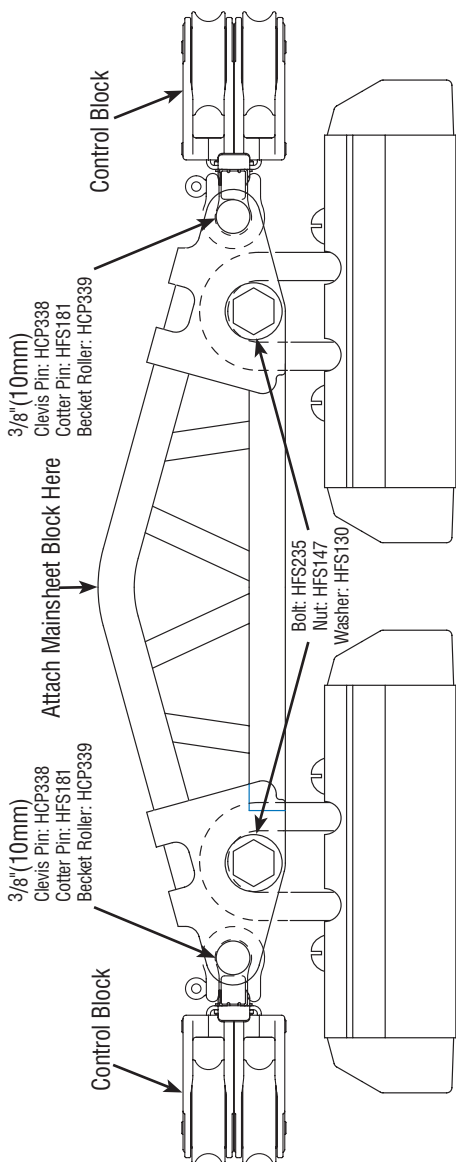

Mount Traveler Car Coupler (580/752)

1. Mount big boat traveler cars on track.
2. Remove large bolt from each coupler and attach to each car as shown in the drawing. Be sure to tighten bolts securely before you go sailing.

Mount Traveler Car Control Blocks (752 Coupler Only)

3. Remove bracket bolts from each end of coupler and attach control blocks as shown in the drawing. Be sure to tighten these bolts securely before you go sailing.
4. Install mainsheet block to top of couple in "V." Be sure to tighten shackle pin tightly before you go sailing..

Mount Mainsheet Block (580/752)

4. Install mainsheet block to top of couple in "V." Be sure to tighten shackle pin tightly before you go sailing..

Maintenance

Harken equipment is designed for minimal maintenance, but some maintenance is required to give the best service and to comply with the Harken limited warranty.

In general, the most important aspect of maintenance is to keep your equipment clean by frequently flushing with fresh water.

In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

With the exception of winches, do not use grease unless specifically recommended in the instruction sheets.

Many Harken products are provided with specific instruction sheets that detail maintenance procedures.

Instruction sheets are available at no charge by contacting Harken or a Harken distributor.

Keep traveler cars clean by frequently flushing with fresh water. Periodically clean cars by squirting a detergent/water solution into the car's center openings. Roll the car back and forth to distribute evenly and then flush bearings with fresh water. This maintenance is very important, particularly when the cars haven't been in use.

Do not use spray lubricants because ball bearings may skid instead of roll. If you use a light machine oil such as 3-in-1, use only a single drop in each ball race. Too much oil attracts dirt.

Clean track with detergent and water.

Frequently inspect shackles and control block fittings for signs of fatigue. Make sure every installation includes Harken track end stops. Arrange control tackle so cars do not hit end stops under load.

Warranty

See Harken catalog for full maintenance and warranty information.