

HARKEN

INSTALLATION SHEET

Cam-Matic® Cam Kits

412, 420

1251 East Wisconsin Avenue • Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 691-3008

Web: www.harken.com • Email: harken@harken.com

 
Part No. Description	Fastener Size*	Fastener Spacing	Min. Line Size	Max. Line Size	Max. Working Load
412/420 Double-wide	#10 TH 5 mm TH	2 ⁷ / ₁₆ " 62 mm	⁵ / ₁₆ " 8 mm	³ / ₈ " 10 mm	500 lb 227 kg

*Use **roundhead** screws when mounting eyestraps on cleats.


TH=Thrushead

Remove red base and use to mark holes for drilling.

DO NOT DRILL THROUGH CAM CLEAT. Drilling through cam cleat voids warranty.

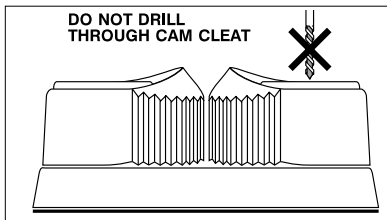

Note: 412/420 double-wide cam cleat requires notches in 144/205 swivel arm for installation.

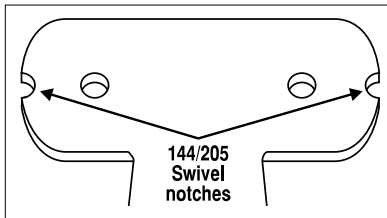

Warranty

See the Harken catalog for full maintenance and warranty information.