

HARKEN®

INSTRUCTION SHEET

Deck Organizers

724, 725, 726, 1867, 1868

ESP: 6052, 6053, 6054, 6055, 6066, 6067, 6071, 6075, 6102, 6103, 6104

N15W24983 Bluemound Rd., Pewaukee, WI 53072-4974 USA

Tel: 262-691-3320, Fax: 262-701-5780

Web: www.harken.com, Email: harken@harken.com




Strictly follow all instructions to avoid an accident, damage to your vessel, personal injury or death. See www.harken.com/manuals for additional safety information.

Fasteners, Deck Strength

Use stainless steel fasteners in all mounting holes using backing plates, washers and locknuts. Deck or mounting surface must solid, designed for block load. Consult with builder.

Install Clear Plastic Washer Isolators

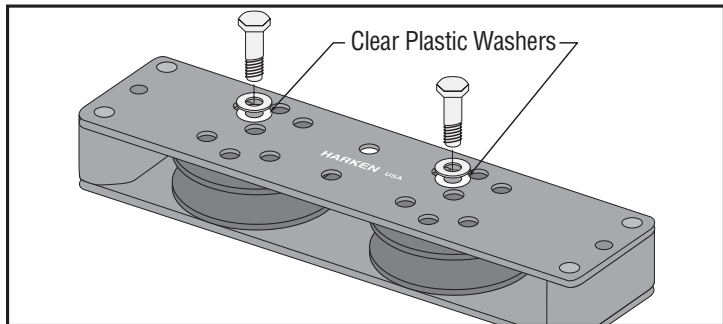

You must install the enclosed clear plastic washers between the stainless steel washers and the aluminum top plate to prevent dissimilar metal corrosion.

Failure to install washers will void Harken warranty.

DO NOT OVERTIGHTEN—ORGANIZERS/FOOTBLOCKS!

CORRECT



Tighten wrist tight (10 ft-lb/14 N-m)

INCORRECT



Do not use power drivers.

Tighten bolts only **wrist tight (10 ft-lb/14 N-m)** to remove play between block and deck. Do not use power drivers. **Overtightening will permanently damage organizer and cause sheaves to bind.**

Maintenance

Harken equipment requires minimal maintenance, but some is required to give the best service and to comply with Harken's limited warranty.

It is important to keep equipment clean by frequent flushing with fresh water. In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

Flush blocks thoroughly with fresh water. Periodically, disassemble the blocks and clean with detergent and fresh water. Lubrication is not required.

Clear plastic washers should always be used between stainless fasteners and aluminum sideplates. Stainless fasteners which pass through aluminum blocks should be coated with an antiseize compound.

Locking nuts should not be used after being removed three times. When replacing shackles and fasteners, use Harken parts to maintain the proper strength.

IMPORTANT! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.

Warranty

For additional safety, maintenance and warranty information see www.harken.com/manuals or the Harken® catalog.