


## Winch Parts Installation Service

### 44STQ

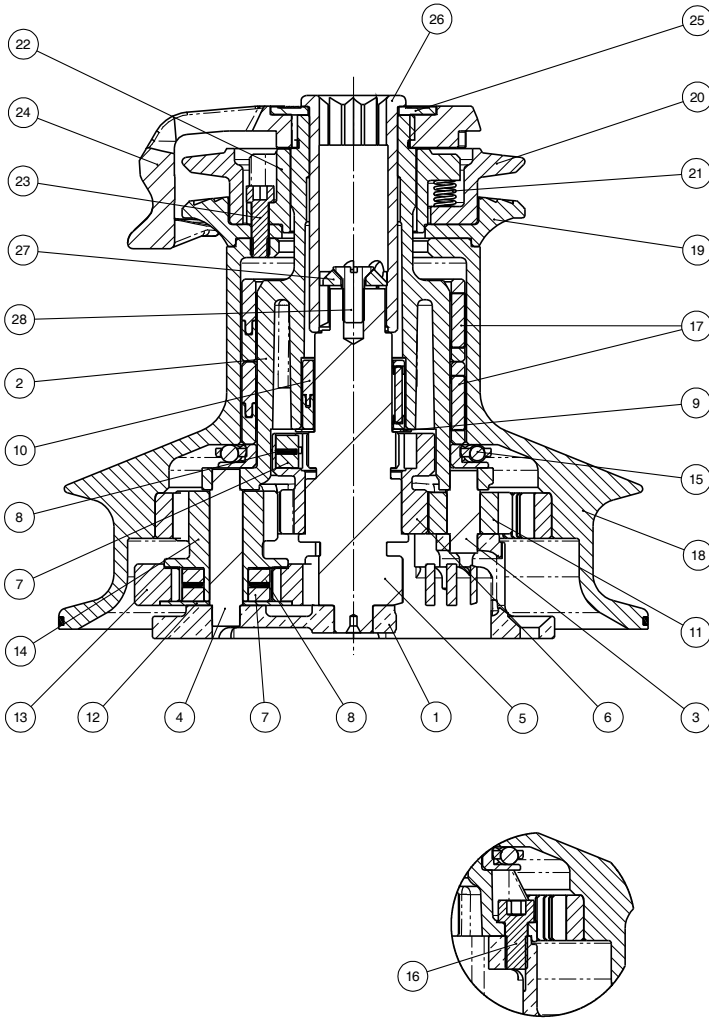

Pos.	Code	Description
1	S278040045	Winch 44 Base
2	S 45730 00 45	Support W44 ST
3	S 27815 00 04	PIN FOR GEAR
4	S 27816 00 04	PIN FOR GEAR
5	S 37676 00 02	Central shaft 45 R
6	S 27811 00 41	Gear Z20 for winch 41/44/46
7	S 00008 00 03	Pawl Ø8
8	S 00038 00 01	Pawl Spring dia 8
9	S 27908 00 02	Washer 28.5/42x1
10	A72607300	Roller bearing 28x38x25
11	S 27812 00 41	GEAR Z12 W44-W46
12	S 27817 00 02	Washer
13	S 27828 00 41	Gear Z25 W44
14	S 27814 00 41	PINION Z13 W44-W46
15	A73804300	Trust Bearing Assy
16	M 06144 03	Screw M8x16 UNI593
17	A 737773 00	Bearing 70/82/30
18	A73788100	Assieme Campana Winch 44 STQ
19	S 36210 00 85	Lower Jaw winch 42-44 ST
20	S 38599 00 85	Upper Jaw W42-W44
21	S 38597 00 01	SPRING
22	S 36208 00 A2	Spring carrier
23	M 06009 03	Screw M6x20 UNI5931
24	S362140042	Self-tailing arm winch 42-44 ST
25	S325360046	Logo plate W44ST
26	S278410003	Hub 44-46 ST
27	S277910085	Washer
28	M 06143 03	Screw M8x20 UNI 6109

When ordering parts, please include a "B" before each number (i.e. B008)

## Service winch before the sailing season begins and once during.

### Required Tools

Screwdriver
Allen Wrench (6 mm)
Allen Wrench (5 mm)
Plastic Head Hammer or Mallet
Small Knife
Brush

Rags
Solvent
Oil
Grease

### Suggested Service Kits

BK4512	10	008 Pawls
	10	038 Springs
BK4513		100 ml Grease

### Installing Winch

- Make sure mounting surface is flat.
- Check sheet entry angle. Should be at least 8° (see drawing).
- Open winch.
- Position winch on deck with drive gear where sheet enters winch drum. Mark holes.
- Remove winch and drill holes.
- Mount using six (6) 5/16" (8 mm) flathead machine screws.
- Apply bedding compound. Bolt winch to boat.
- Clean excess bedding compound from base drain holes.
- Lubricate and close winch.

### Minimum/Maximum Line Diameter

- Harken winches feature spring-loaded self-tailing jaws which adjust automatically to the following line sizes:
- Minimum 5/16" (8 mm)
- Maximum 9/16" (14 mm)

### Positioning Stripper Arm

- Loosen top screw (6143).
- Remove handle socket (26648).
- Lift stripper arm (37850) and position as desired.

### Opening Winch

- Remove top screw (6143).
- Remove handle socket (26648).
- Remove 3 screws (6391) in stripper arm (37850).
- Remove stripper arm.
- Remove 4 screws (6009) in stripper arm base (27668).
- Lift support base.
- Lift off drum.

### Servicing Winch


- Remove bearings from center stem.
- Drum support bearing 27588/6337/27879 cannot be removed; clean with solvent and lubricate lightly with grease.
- Remove allen screws (6432) holding center stem to base.
- Remove center stem (46010) carefully.
- Remove pawls and springs - service as below.
- Remove all bearings, gear shafts and gears.
- Service one gear shaft assembly at a time to avoid confusion.
- Inspect plastic bushings for wear.
- Remove all pawls and springs and service (see below).
- Use brush to lubricate all gears, gear shafts, bearings, teeth and all moving parts lightly with grease.
- Replace pawls and springs and lubricate lightly with oil.
- Assemble and close winch.

### Servicing Pawls


- Catch spring with knife and hold against pawl.
- Lift out pawl.
- Clean and check for wear.
- Place spring against pawl with straight leg against pawl.
- Hold spring closed and slip pawl into pawl socket.
- Lubricate pawls using oil.

# HARKEN

### Mounting

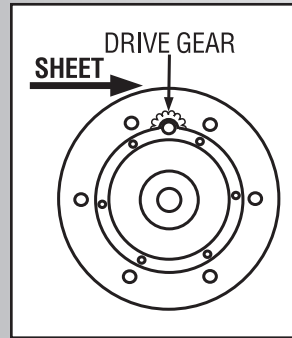


Position drive gear where sheet enters winch drum.

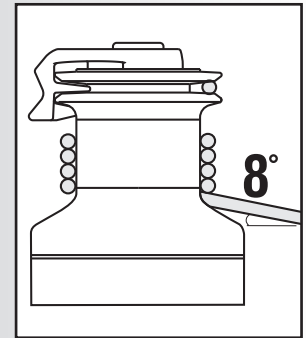


Sheet entry angle must be at least 8°.


### Servicing Winch

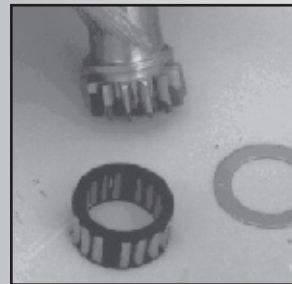

Clean all metal parts with solvent.

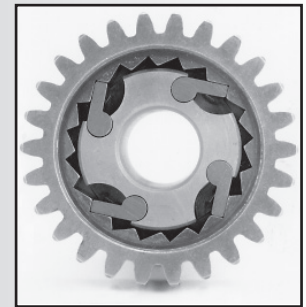


Use a brush to spread a light, even coat of grease.

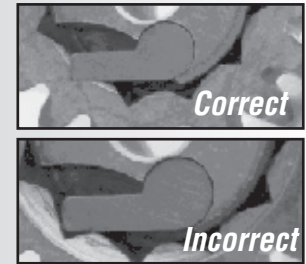


If ratchet gear is mounted backwards, winch will slip.

### Servicing Pawls

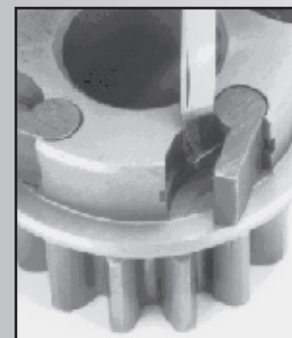

Use knife to free captive spring.

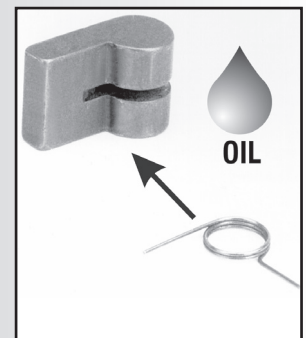

Insert spring with straight leg against pawl. Use oil for lubrication.

### WARNING

EN: Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodized, chrome plated or plastic parts.

F: Évitez soigneusement tout contact de nettoyant pour teck ou autres produits de nettoyage avec les winchs et plus particulièrement avec les pièces en aluminium anodisé, en métal chromé ou en plastique.

D: Keine Teak - Reiniger oder andere Reiniger die ätzende Stoffe enthalten, mit Wünschen, eloxierten, verchromten oder Kunststoffteilen in Berührung bringen.

I: Evitare il contatto dei prodotti per la pulizia del teak e di altre sostanze pulenti contenenti soluzioni caustiche con i winch e in particolare con i componenti anodizzati, cromati e plastici dei winch.

E: Evitar que los productos especiales para la limpieza de la Teca o cualquier otro limpiador que contengan soluciones cáusticas, entren en contacto con los Winches y en particular con componentes cromados, plateados o anodizados así como con las piezas de plástico.

4583/5-05

