

# **HARKEN®**

## **INSTALLATION SHEET**

### **6061 Furling Main Clew Block**

N15W24983 Bluemound Rd., Pewaukee, WI 53072 U.S.A.

Telephone: (262) 691-3320 • Fax: (262) 701-5780

Web: [www.harken.com](http://www.harken.com); [www.harkenstore.com](http://www.harkenstore.com) • Email: [harken@harken.com](mailto:harken@harken.com)


#### **Sail Cutout for Clew Block**

Cut sail for clew block and strap through block as shown on reverse side.

#### **IMPORTANT — If You Remove Clew Block Sheave**


If you remove sheave, retain clear plastic washers to prevent corrosion and to maintain proper spacing.

Nut and bolt must be tight for proper operation. If too loose, inner metal sleeve may spin and cause undue wear. Replace  $\frac{3}{8}$ -16 nylon locking nut when it becomes ineffective.

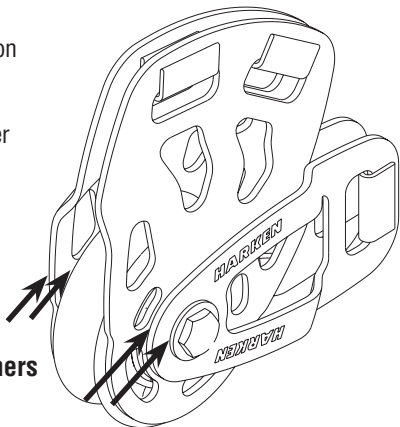

**Clear Plastic Washers  
HCP374**

**Important!** If you remove sheave from clew block assembly be sure to retain and reinstall clear plastic washers to maintain proper spacing. Nut and bolt must be tight for proper operation. If too loose, inner metal sheave may spin and cause undue wear.

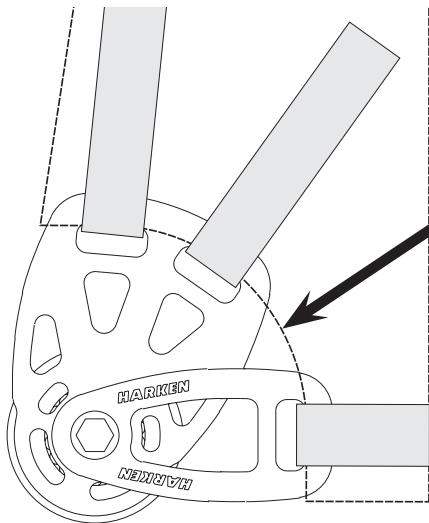

Cut sail for clew block and strap through block as shown.

## Maintenance

Harken equipment requires minimal maintenance, but some is required to give the best service and to comply with Harken's limited warranty.

Keep equipment clean by frequent flushing with fresh water. Periodically clean with mild detergent and water solution. Spin sheaves to distribute soap solution evenly.

In corrosive atmospheres, stainless parts may show discoloration around holes, rivets and screws. This is not serious and may be removed with a fine abrasive.

**Important! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.**

## Warranty

For additional safety, maintenance and warranty information see [www.harken.com/](http://www.harken.com/) manuals or the Harken® catalog.