

HARKEN®

INSTALLATION SHEET

3156 High-Beam Big Boat Traveler Track


N15W24983 Bluemound Road • Pewaukee, WI 53072 USA

Tel: 262-691-3320 • Fax: 262-701-5780

Web: www.harken.com • Email: harken@harken.com



Strictly follow all instructions to avoid an accident, damage to your vessel, personal injury or death. See www.harken.com for additional safety information.

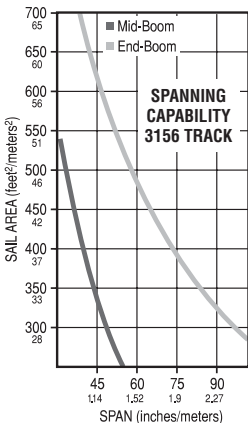


3156 High-beam big boat traveler track is designed to be self-supporting to span cockpits or companionways without additional bridge structures. 3156 Track is shipped with 8 bolt slides, 10 for 8' (2.44 m) track. Contact Harken if more slides are required (Part No. HCP164).

You must supply: $\frac{5}{16}$ " (8 mm) hexhead bolts, stainless steel washers or backup plate and lock nuts for mounting track.

Mounting Track

Place at least three (3) bolts at each end of the track, with two (2) bolts placed immediately next to each inboard end of the span. For the remainder of the supported beam, place bolts on 4" (102 mm) centers.

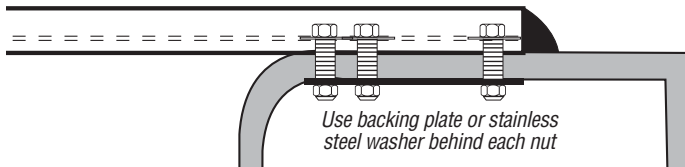

To mount track, calculate hole spacing and drill desired holes in deck, seats or other mounting surface. Place appropriate number of $\frac{5}{16}$ " (8 mm) hexhead bolts on bolt slides and slip into groove in bottom of track.

Place one Mylar washer (included) on each bolt under track. These washers are necessary to force bedding compound into mounting holes and insure a good seal.

Apply high quality bedding compound to mounting surface around each hole. Place bolts into holes and lower track. Bolt securely using lock washers or lock nuts. Most mounting surfaces will require a backing plate for proper strength.

Maintenance

Traveler Cars: Clean by frequently flushing with fresh water. Periodically clean car by squirting a detergent/water solution into center openings. Roll car back and forth to distribute evenly then flush bearings with fresh water.

Do not use spray lubricants because ball bearings may skid not roll. Apply one to two drops of McLube® OneDrop™ to ball contact surfaces of track. Roll car back and forth through OneDrop™ several times to distribute onto bearings. Wipe remaining OneDrop™ off track. OneDrop™ is preferred but you can also use one to two drops of a light machine oil. Too much oil attracts dirt.

Track: Clean with detergent and water.

Important! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.

Warranty

For additional safety, maintenance and warranty information see www.harken.com/ manuals or the Harken® catalog.